

WILDCAT TE

MANUAL

Version 1 / 2015 ©



This manual is copyrighted.
Partial reproduction is allowed only after prior approval by
ICARO paragliders, all other rights are reserved.

Verification of Checks and repairs

WILDCAT TE	
Serial number:
ICARO incoming test/ date:	Name/ Stamp

Check (C) Repair (R)	Which repair/ Check? Check valid until?	Performed by/ date
Measured porosity data	Measured data of the lines	Estimated condition optical: technical:

Check (C) Repair (R)	Which repair/ Check? Check valid until?	Performed by/ date
Measured porosity data	Measured data of the lines	Estimated condition optical: technical:

Check (C) Repair (R)	Which repair/ Check? Check valid until?	Performed by/ date
Measured porosity data	Measured data of the lines	Estimated condition optical: technical:

TABLE OF CONTENTS

VERIFICATION OF CHECKS AND REPAIRS	2
FOREWORD	4
TO GET TO KNOW YOUR WILDCAT TE	6
FLYING WITH THE WILDCAT TE	9
HARNESSES	9
FLIGHT PREPARATION:	9
LAUNCH	10
ACTIVE FLYING	10
TURNING	11
LANDING	11
DESCENT TECHNIQUES	11
BIG & SMALL EARS	11
B-LINE-STALL.....	11
SPIRAL DIVE.....	11
WINGOVER.....	12
WHAT HAPPENS WHEN IT HAPPENS?	12
KNOTS AND TANGLES.....	12
DEEP / PARACHUTE STALL	12
ASYMMETRIC COLLAPSE	13
SYMMETRIC COLLAPSE	13
EMERGENCY STEERING	13
NEGATIVE SPIN	13
FRONT STALL	13
FULL STALL	13
CARE INSTRUCTIONS, REPAIRS, INSPECTION	14
CARE INSTRUCTIONS	14
REPAIRS.....	15
TERMS OF THE GUARANTEE	15
ANNEX	16
GUARANTEE CARD	18
INSPECTION INSTRUCTIONS.....	18
PARTLIST	19
LINELENGTH ALL OVER.....	19
DESCRIPTION OF CANOPY	23

Congratulations on buying your
WILDCAT TE
and welcome to the family
of ICARO - pilots!

Before you get to know your glider please read the manual, there are any important items.

Your **WILDCAT TE** is pattern tested in B¹, and therefore a “paraglider with good passive safety and forgiving flying characteristics. Somewhat resistant to abnormal flight conditions.

It is suitable for all pilots including pilots of all levels”.

It is valid using any harness which has been categorized by “GH” and may be only used for those purposes described in this manual.

It is strictly prohibited to use the WILDCAT TE

- ***under the influence of drugs or alcohol,***
- ***with opened Trimmspeed Optimizer (TSO) more than 20 mm,***
- ***in insufficient experience or training of pilots,***
- ***without guilty license,***
- ***beyond the minimum and maximum recommended Take Off- Weight,***
- ***with damaged glider, lines, risers or harness,***
- ***in the rain, in snow, in the clouds and fog and in turbulent weather conditions,***
- ***with motor drive,***
- ***tandem- flying and***
- ***Aerobatics.***

If you cannot keep your glider under control use the rescue system in good time. Always pay attention to ground distance.

Our products are made with great care and state of the art. Each glider before it is delivered to the dealer or flight school is checked by ICARO paragliders (incoming test). This date is entered in the identification plate and as well guarantee as the first 2-year-check period starts. The incoming test must also be documented in the manual. Test flights are made only on a random basis.

On that score an approved ICARO dealer or teacher of the flight school must inflate a new ICARO paraglider in the wind or should carry out the first flight before the wing is handed over to you.

This date is entered in the identification plate and as well guarantee as the first 2-year-check period starts. If this seal is missing, it must be assumed that this

¹ Used harness in accordance with EN 1651:1999 and EN 12491:2001

glider is not identical in construction with the model tested at the specification center.

The use of this paraglider is entirely at your own risk. Every pilot bears the responsibility of his/her own safety.

In order to get to know your glider, we recommend that you practice with your glider on the ground. Pulling up in flat gradients is great practice for fine tuning your launch techniques. Here you can get to learn the reactions of your glider without any stress and hectic. Ground practice pays off in the air.

All technical data and instructions were drawn up with great care. ICARO paragliders cannot be made responsible for any possible errors in this manual.

Important information in this manual is written in ***fat cursive writing***.

Any important changes to this manual will be published in our homepage (www.icaro-paragliders.de).

Should you decide to sell this glider at a later date, please pass on this manual to the new owner.

Each alteration of the glider (lines, canopy, risers) is dangerous on reactions of the glider are not predictable. Your glider will lose its pattern test result and guarantee.

You can only fly your glider with a valid flying license and in accordance with local rules and regulations.

The manufacturer or distributor assumes no responsibility for accidents occurring while using it.

Every pilot must ensure that the glider is properly checked at regular intervals.

Many countries have specific regulations or laws regarding paragliding activity. It's your responsibility to know and observe the regulations of the region where you fly.

Environmental aspects:

The materials of which a paraglider is made require a special waste disposal. So please send disused gliders back to us. We will care about a professional waste disposal without costing for you.

Please do our nature-near sport in a way which does not stress nature and environment!

Please do not walk beside the marked ways, do not leave your litter, do not make unnecessary loud noises and respect the sensitive balance in the mountains.

Especially at the launch site consideration is needed!

To get to know your **WILDCAT TE**

Allowed for training	no
Allowed for towing	not tested
Certified / allowed for aerobatics	no/ no
Certified / allowed for flying with passengers	no/ no
Certified / allowed for flying with motor drive	no / not tested

Technical data		XS	S	M	L
Certification LTF/ EN		B			
Number of cells		52			
Number of risers		4+1			
Weight of the glider	kg	4,7	5,1	55	59
Wing Area flat	m ²	22,6	25,7	27,9	30,8
Wing Span flat	m	11,2	11,9	12,4	13,0
Aspect Ratio		5,5			
Wing Area projected	m ²	18,5	21,0	22,8	25,2
Wing Span projected	m	9,1	9,7	10,2	10,7
Aspect Ratio projected		4,5			
Take Off Weight minimum	kg	57	65	80	100
Take Off Weight maximum	kg	75	90	110	125
Maximum way of the TSO	mm	20			
Recommended storage temperature	Celsius	+ 5 ⁰ to + 30 ⁰			
Recommended storage humidity	% rel. H.	55% to 75%			
Check interval	24 months or 150 operating hours, depending on what occurs sooner.				

Canopy

The canopy is made of synthetic fabric with different strengths where a reinforced thread-net is woven in, which stops the fabric from further tearing and is increasing the firmness at the seams and has sticks for an optimized geometry of the canopy. Between the single groups of main lines are taut ribbons sewn in, which are regulating the tension of the sail. Along the trailing edge there are miniribs for better aerodynamic.

Lines

Depending on the line level, we use different line diameters. The complete geometry of the lines is shown on the single line plan, which you find in the annex of the manual.

The end control of all line lengths is documented for all paragliders produced by ICARO paragliders. The complete geometry of the lines is shown on the single line plan, which you find in the annex of the manual.

The length of the steering lines is set correctly at the factory and should not be changed. The improper adjustment of the steering lines can cause severe changes to in flight behavior.

Risers

The Glider has 4 fold risers with separated A-risers an acceleration system which will be activated with a foot bar and a Trimmspeed Optimizer (TSO), mounted on the rear riser. The risers are signified. The main break line comes through a return pulleys, the handle of the main break line is mounted on the C- riser. The acceleration system is mounted on the A- riser.

To fix it with the foot bar you must connect the brummel hooks of the foot bar with the brummel hook of the acceleration system.




How to vary the trim of the glider

WILDCAT TE has an acceleration system and the Trimmspeed Optimizer (TSO) that allows a specific extension of the rear riser.

Acceleration system

Most commercially available harnesses have pulleys attached for the speed system.


The lines of the speed system are fed up through the pulleys on the harness and connected with the brummel hook or the foot bar.

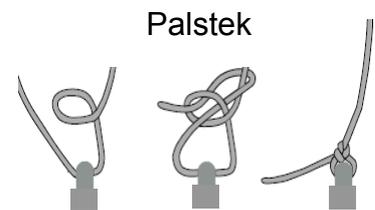

When flying normal all risers have the same length. When using the accelerator system the risers are shortened by a constructive exactly defined length.

Therefore the angle of attack of the canopy is smaller and speed increases.

The length of the accelerator is adjusted to the left and right of the foot pedal so that when your leg is fully extended, then the acceleration is at maximum – both rollers are touching.

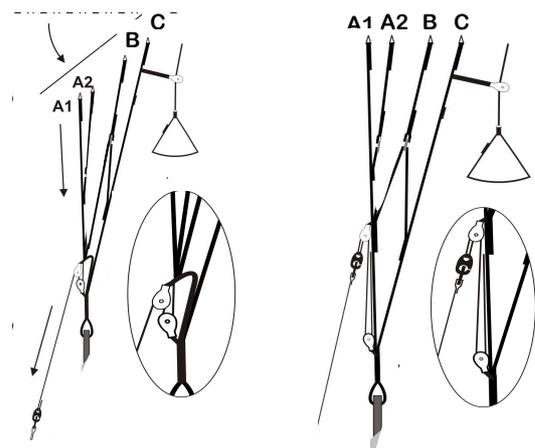

Make sure that the speed system lines runs freely.

Please pay attention that the glider will not be pre-accelerated, while the accelerator is loosened, when the acceleration ropes are set too short.


The more turbulent the weather conditions and when near the ground, the less acceleration should be used. Using the accelerator decreases the angle of attack and can make the glider more prone to collapse.

Do not use the acceleration system and brakes at the same time! It is very dangerous to use both simultaneously as it can result in serious collapses.

Trimmspeed Optimizer

- ***It is forbidden to open the TSO more than 20 mm because a paraglider with a setting of more than 20 mm has no declaration of conformity.***
- ***To fly with a setting of more than 20 mm is forbidden because it may occur that a portion of your glider deflates, especially when using the acceleration system and flying in turbulent conditions.***

- ***If the TSO is damaged (e.g. it is broken) the rear riser is protected with a backup riser. In this case, you will have to correct the drift by leaning on the opposite side, carefully and safely fly to the nearest landing place and do not pull too hard on the brake lines; there is an increased risk of the wing to stalling or negative turn being initiated.***
- ***Its also important for your safety that you never change recommended settings for the TSO to obtain a higher speed without any adjustment would be necessary.***
- ***Both sides must always be set to the same length!***

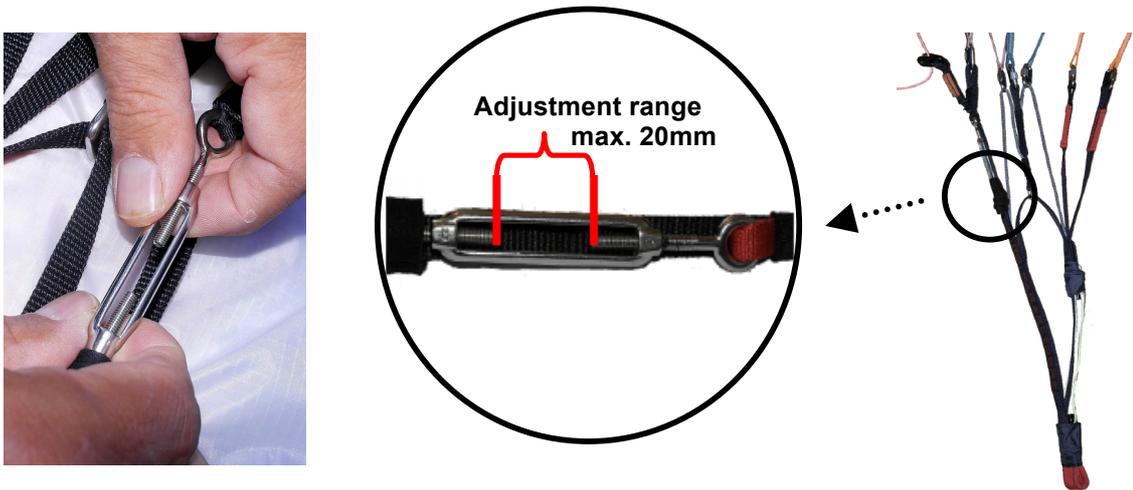

Depending on whether a glider is flown at the upper or lower limit, the trim speed is different. With increasing age, the A-and B-lines stretch in proportion to the C / D level a bit more. Even with the temperature changes the trim speed and extreme flight behavior of modern gliders but therefore it is not necessary to adjust the TSO. The TSO is protected by a neoprene cover on the rear riser, can only be set on the ground and is unchangeable in the air. For adjusting put back the neoprene covering, than the safeguard, adjust TSO by 5 mm steps (= distance between adjustment notches) and place back the safeguard. Total value of the TSO is limited with a safety belt.

When all risers have the same length the original trim exists. The lengths of the risers can be combined (add correction of wing loading, aging and temperature).

wing loading	adjustment range in mm	Aging in flight hours	adjustment range in mm
Minimum take off weight	+ 15	> 100	+ 5
Middle weight	+ 5	> 200	+ 10
Maximum take off weight	0	> 300	+ 15

If all factors would require a total correction we recommend the correction of the lines to original lengths (aging correction) so that only the adjustment for flying at the lower limit is regulated by the TSO. The correction to the lines or any other repairs should only be carried out at an authorized ICARO centre.

Flying with the **WILDCAT TE**

Harness

The **WILDCAT TE** is certified for use with harnesses GH type. Practically all modern harnesses are GH type harnesses. Older harnesses with fixed cross belts (GX type) are not certified and should not be used.

The adjustment of the harness chest strap controls the distance between karabiners and affects the handling and stability of the glider. Excessive tightening the chest strap increases stability but also the risk of twists following glider collapse, and it also increases the frequency of getting collapses due to poor feedback from the glider.

Be aware that relative brake travel also changes with the height of the connections.

The risk of twisting is also strongly affected by the seating position of pilot. Flying in a laid back (reclined) position makes it much more difficult to react in time to prevent riser twisting. With the chest strap in a more closed position the glider also has more tendency to maintain a stable spiral, lengthening of the chest strap gives more feedback from the glider but decreases stability.

ICARO paragliders recommends following settings:

Take off weight	< 80kg	80 kg -100 kg	> 100kg
Horizontal distance of the main karabiners	38 cm – 42 cm	42 cm – 46 cm	46 cm – 50 cm

Flight preparation

- Whilst unfolding your paraglider check the canopy and cell walls for damage. Always take into consideration that the paraglider may have become damaged during transportation.
- Make sure that no sand, stones or snow get inside the canopy as the extra weight collected in the trailing edge may slow down or even stall the glider. Sharp edges damage the canopy.
- Check the lines for knots, twisting and damage, the brake lines for knots, kinks and their symmetric. Loose or incorrect brake knots can cause serious accidents through loss of the steering of the glider! The correct length of the main brake line must not be altered.
- Separate the line groups carefully and bring the risers in order. All lines must run freely from harness to canopy. It is equally important that the lines are unhindered and cannot get caught up during the launch. The brake lines lay directly on the ground, so pay attention that they do not get caught during launch.
- There should not be any lines underneath the canopy. If the lines wrap around the canopy, this can result in injury or death!
- Check your harness and make sure that all connections to pilot are correctly closed. Check that all karabiners are closed and can not be opened accidentally in flight, the risers are not twisted and the TSO is set to the same length on both sides and not more opened than 20 mm!
- Check canopy (all cells are open), wind direction and airspace.

Launch

The most important thing during the take-off is, like at all other gliders too, not the force but the constancy of the pull. At the start we advice to fix the accelerator with the Velcro which is attached at the front of the sitting board, in order to avoid tripping while pulling up the glider or when starting up.

Hold the inner A-risers and the handles of the brakes and use progressive pressure on the A-risers and the energy of your own body weight until the wing is fully inflated overhead. The canopy is inflated quickly.

When there is no pull from the lines use slight pressure on the brake. After a few accelerating steps and at the same time let go of the brakes gently, you will take off. Then use slight pressure again on the brakes to fly at a speed with minimal sink rate.

When there is strong wind the reverse launch technique is recommended. Holding the brakes, turn around to face the wing passing one set of risers over your head as you turn. We suggest building a "wall" by partially inflating your glider on the ground, thus sorting out the lines thoroughly.

Check the airspace is clear and gently pull the glider up with inner riser. When the glider is overhead, check it gently with the brakes, turn and launch. In stronger winds, be prepared to take a couple of steps towards the glider as it inflates and rises.

When towing always steer sensitively, do not brake too much, your the glider already flies at an increased angle of attack.

Active flying

We advise you to apply the brakes at all times whilst flying in turbulences. You hereby increase the opening angle and the wing is more stable. At the same time the pilot has a better feeling for the canopy via the brakes. When flying into strong thermals please pay attention that the canopy does not remain behind the pilot.

This is avoided by releasing the brakes when entering an up-wind to increase speed. Vice versa the glider must be slowed down with the brakes if the canopy falls before the pilot when entering a down-wind or exiting a thermal. We recommend increasing speed when crossing a downwind or during headwind.

This type of flight technique is called "active flying". The pilot may roll his body with weight shift to move with the glider when the glider rolls to the right or left. These subtle adjustments keep the glider flying smoothly.

The high performance of your **WILDCAT TE** is also during accelerated glide. When you use the speed system, be careful. Do not step too quickly because your glider will dive down from the strong change in angle of attack.

Put equal pressure on the speed bar with your feet until the pulley touches the A-riser and the glider will quickly gain speed and the sink speed remains very moderate from beginning up to full speed.

The more turbulent the weather conditions and when near the ground, the less acceleration should be used. Using the accelerator decreases the angle of attack and can make the glider more prone to collapse.

Do not use the acceleration system and brakes at the same time! It is very dangerous to use both simultaneously as it can result in serious collapses.

Turning

A combined steering technique is suitable for every situation. The **WILDCAT TE** is agile and reacts to steering impulses quickly and directly. Strong, one sided pulling of the brakes brings the glider into an obvious side angle and the glider flies fast steep curves until spiral dive begins.

If the brake lines are pulled too fast or too far the glider will be stalled!

A one-sided stall is signaled clearly by: The curves inner side of the wing is getting soft, and nearly stops. In this case you have to release the brake line!

Landing

Always stand up in the harness in the landing position very early in order to be able to react as fast as possible to sudden events. Give yourself plenty of options and a safe margin of error. Set up your final landing leg to face into the wind to minimize groundspeed. If you leave the inflated leading edge bang on the ground, this can cause the cell walls to burst!

***Do not pull it too much, to avoid a stall of the glider in this very low altitude!
Do not reduce height by “pumping” with the brakes.***

Descent Techniques

- ***Training of descent techniques and simulation of flight incidents (SFI) should only take place at professional safety training seminars with professional trainer and only while flying over water.***
- ***Before inducing any exercise control the airspace beneath.***
- ***During the exercises stay in contact with the canopy.***
- ***If the glider is out of control, use your reserve parachute.***
- ***Fullstall, negative spin and wingover more than 90° are aerobatics and are not permitted during normal air traffic forbidden.***

Big Ears

Only take the outer lines of the A-risers in your hand, without releasing the brakes and pull down leaving it run through your hands (use gloves!). Sink rate increases but not the forward speed. If you use the acceleration system then higher sink speeds can be achieved. Reopen the wing by pushing up with your hands and if necessary then pump the brakes with short symmetric movements. For directional control while using the big ears, you should use weight shift. Using acceleration system during this exercise helps reduce these negative risks.

Never attempt tight turns or spirals with Big Ears, as the A-lines will be over stressed.

B-Line-Stall

The **WILDCAT TE** is a very agile glider with high trim speed. Therefore spiral dive is the most effective method to reduce flight level. B-Line-Stall is not so effective, furthermore stresses the material of the glider and reduces operating life of the canopy.

To enter and hold a B-line-stall requires considerable strength. It is very dangerous performing a B-line-stall incorrectly and following errors must be avoided:

- pulling too far on the B-line-stall aid, so that the A-lines are pulled too, and using brakes during or directly after exiting,
- exit is too slow,
- releasing the B-line-stall aid without simultaneously pushing up with your hands
- Brakes must not be shortened by twisting around your hand during the exercise.

Spiral Dive

To initiate a spiral dive, look in the direction you want to go, roll your body weight in that direction and at the same time smoothly pull down on the inside brake. The **WILDCAT TE** will start to turn, speed up and then drop into a spiral. To keep the wing under control you must pull and release the inside brake. Exit slowly. Bring your body weight back to a neutral position and as soon as the wing levels out, apply the brakes gently. This procedure should be done slowly and will take a couple of turns to complete.

If you pull abruptly and too far on the brakes, the canopy may enter a negative spin. When entering a spiral dive keep the brake on the outer curve released.

The **WILDCAT TE** does not have a tendency for stable spiral dive. If under certain conditions, it should go into a stable spiral dive then actively exit the exercise by bringing your weight into a neutral position, release the brakes of the inner curve side and brake gently on the outer curve side until you notice that the wing starts to level out. Then gently brake on the inside curve for several turns until normal flights returns.

Rate of descent could be very high also the dynamic and g- load. In reliance of your physical condition it is possible to have a blackout.

Wingover

The **WILDCAT TE** is an agile glider, and it is quite easy to get to an excessively high angle of bank in just a few turns. Practice wingovers gently at first, as there is a chance of quite large collapses at high bank angles.

What happens when it happens?

Knots and tangles

The best way to avoid knots and tangles is to inspect the lines before you inflate the wing for take-off. If you notice a knot before take off, immediately stop running and do not take-off. If you have taken-off with a knot you will have to correct the drift by leaning on the opposite side of the knot and gently apply the brake line on that side too. You can gently try to pull on the brake line to see if the knot becomes unfastened or try to identify the line with the knot in it. Try to pull the identified line to see if the knot releases. If the knot is too tight and you cannot remove it, carefully and safely fly to the nearest landing place.

Be very careful when trying to remove a knot. When there are knots in the lines or when they are tangled, do not pull too hard on the brake lines, there is an increased risk of the wing to stalling or negative turn being initiated.

Deep / Parachute Stall

Your **WILDCAT TE** has been carefully designed to resist entering deep stall. Before exiting a deep stall please ensure that the brakes are fully released.

Actively exit the deep stall by reaching up and push forward with both palms on either A-risers or pull on the risers.

Avoid flying in very humid air or in rain. A wet canopy may have very unpredictable flying characteristics, one of which is a radically increased risk of deep stall.

Never pull the brake-lines during a parachute stall, because the glider would go into a full stall immediately.

If you find yourself flying in unavoidable rain we strongly recommend that you avoid any sudden movements or radical brake line input, that you do not pull Big Ears or B-Line-Stall, and that you steer clear of turbulence and avoid a deep flare on landing.

Asymmetric Collapse

While flying in turbulent conditions it may occur that a portion of your glider deflates. However, just like in flying in turbulences, please pull gently on both brakes. Re-inflation is speeded up by counteracting the turning movement of the canopy until normal forward flight return. Then pump the brake line on the collapsed side.

If the collapsed part of the canopy is very big, you have to break the open side very dosed (not too much!) to avoid a stall.

Symmetric Collapse

Your **WILDCAT TE** normally re-inflates promptly in a symmetric collapse without pilot input. Applying the brakes symmetrically will speed things up.

Emergency Steering

Should it not longer be possible to steer your **WILDCAT TE**, for example due to a broken line, the glider may be steered by gently pulling on either rear riser. We recommend for emergency control in the air to use the stable line.

With a bit of weight shift and by pulling down the stable line allows controlling your glider precisely and easily.

By steering this way airspeed is reduced hardly. Therefore, for landing you must change to the rear risers to control your glider. Handling will be more direct so being careful not to pull too hard.

Negative Spin

If the pilot abruptly applies full brake to one side of the glider while the other side is at zero brake, the faster side may fly around the braked and stalled side resulting in a spin. Alternatively, if flying very slowly with almost full brakes on both sides, if one hand releases one brake suddenly, while the other continues with full brake, the glider may enter a negative spin. To exit a spin just do "hands up" to release the brakes and the glider will return to normal flight.

If you do not have control over your glider and you are running out of altitude, immediately deploy your reserve parachute.

Front stall

After a front stall of the canopy, the wing moves backwards while the pilot with his higher mass moves further ahead. Wing behind, pilot ahead, significantly high angle of attack – there is clearly only one thing to do: Do not break or you run the risk of a dangerous stall.

The pilot must not pull the control lines before the canopy is at least above him again. If the canopy then shoots forward dynamically, it is absolutely vital to stop the motion in a consistent and decisive manner via the brakes.

Full Stall

Spin and full stall are both dangerous and somewhat unpredictable exercises. Do not stall or spin your paraglider on purpose.

To initiate a full stable stall, apply both brakes to maximum arm extension. The pilot will swing back under the canopy and finally the canopy will stabilize to a full stall. Once in a stable stall, the exercise can be completed. Release the brakes just a little and let the glider fill until it regains shape. Then release the brakes fully and your glider will return to normal flight.

It is imperative that the pilot fully completes this exercise and holds on, as a premature release while the glider is still falling back may cause the glider to rapidly dive ahead past the pilot. There is a possibility of the pilot landing in or entangling in the glider.

Care instructions, repairs, inspection

Care Instructions

- Even with good care and maintenance, just like any item exposed to the elements, your glider can wear out after a certain amount of use. This can change flight behavior and safety. We recommend a regular safety inspection of the canopy and all lines.
- If you clean your glider it is best to use warm water and a soft sponge.
- Store your glider in a dry and dark place, ideally between 5° and 30° Celsius and humidity between 55 and 65%. Do not store it near chemicals or petrol.
- If you will not fly for longer period, store the glider releasing all compression straps and take it out of its backpack so that the fabric is not compressed, creased or stretched.
- Avoid storing your glider for days at a time in a hot car.
- Unpack your paraglider shortly before launch and pack away immediately after landing to avoid any unnecessary UV exposure.
- When unfolding the paraglider insure that neither the canopy nor the lines become too dirty. Dirt particles can damage the material and lines.
- Never use chemical cleaning agents, brushes or hard sponges on the material, as these destroy the coating and affect the strength. Also avoid dipping it in a swimming pool; the chlorine will damage the cloth. The canopy will become porous and will loose structural strength.
- Never attempt to clean your paraglider in a washing machine. Even without using detergents the simple mechanical abrasion will quickly finish the canopy and render it useless.
- If you are flying near the sea most the wing may age faster because the air is humid and salty. In this case we suggest you have it checked more often than prescribed in this manual.
- If you must rinse or clean your glider do so with fresh water. Frequent cleaning will accelerate the ageing process.

- If the glider has become wet, lay it out so that air can get to all areas of the fabric.
- After landings in trees or on water you should check the length of the lines.
- Always make sure that your intended logo will not in any way influence the glider behavior. If in doubt we suggest avoiding the attachment of advertising logos on the wing. ICARO paragliders cannot be held responsible for any mishaps caused by intentional after sales changes done to the wing.
- The **WILDCAT TE** is a very strong paraglider. Flying all the descent exercise will not normally pose a structural problem but aerobatic training does accelerate the ageing process dramatically.
- There is no special method packing your glider. ICARO paragliders commends the "Cell to Cell-method bag because the reinforcements of the leading edge stay flex-free on top of each other and do not fold.

When you did not fly for a longer period ICARO commends to check the glider (e.g. mildew stains, splice of the lines, corrosion of the shackles and carabines).

If you are not convinced of the gliders airworthiness please send your glider to an authorized ICARO dealer to check your glider. The same is commended for harnesses.

Repairs

Only use original ICARO parts for repairing your glider. If you don't you lose the guarantees for your glider.

Small holes in the canopy (max. 20x20 mm) can be repaired by the pilot by using self adhesive sailcloth on both sides of the perforation.

Damage to the lines or any other repairs should only be carried out at an authorized ICARO centre. If the glider needs to be repaired, please contact your local ICARO paragliders dealer.

Inspection

It is important to have your **WILDCAT TE** inspected by a trained ICARO technician but it is also allowed to check your glider for yourself.

In the annex you find the regulations for checks of certified gliders and items in order to perform a paraglider inspection you need.

Inspection interval

24 months or **150** operating hours, depending on what occurs sooner.

Without regular certified inspections, your glider will loose its pattern test result and guarantee.

ICARO recommends having wings that are often used for training of descent maneuvers, acrobatics or flying in salty ore sandy conditions subjected to checkups all 100 operating hours or 12 month.

It is also important, that ground handling also will be considered. All gliders, especially gliders manufactured with light and thin material are mechanically more stressed than other gliders.

Therefore ICARO recommends multiplying ground handling time with factor 1, 5.

Not only gliders have a recurrent inspection interval.

Airworthiness of harnesses, snap hooks and rescue systems must also be verified. Generally it is recommended to change aluminum snap hooks after 24 months or 150 operating hours.

All inspections and repairs must be documented (manual page 2).

Terms of the guarantee

ICARO paragliders guarantees the proper processing, an operation within the allowable limits of proper operation and the fulfillment of the eligibility criteria of glider/harness/rescue equipment at the time of first delivery by ICARO paragliders.

Paragliders: **24** month or **150** operating hours, depending on what is first

Harnesses: **24** month

Rescue systems: **24** month

Guarantee is only guilty for ICARO products with LTF/ EN certification ².

What is covered by the guarantee?

Provided that ICARO paragliders accept the fault the guarantee contains all necessary spare parts related to the replacement or repair of defective parts and working time.

ICARO paragliders accept no freight costs (outbound and return transportation).

What are the conditions of the guarantee?

Provided that ICARO paragliders accept the fault the guarantee contains all necessary spare parts related to the replacement or repair of defective parts and working time.

- ICARO paragliders needs to be informed immediately after the discovery of a defect and the defective product must be sent to us for testing.
- The glider / the harness was used in normal circumstances and maintained according to the instructions. This includes in particular the careful drying, cleaning and storage.
- The glider / the harness were used only within the applicable guidelines and all rules have been complied with all times.
- All flights must be accounted for within the flight book.
- There were only original spare parts used and checks, exchange and / or repairs were conducted by an authorized dealer or by ICARO paragliders company / person and properly documented.
- The online form on www.icaro-paragliders.com must be sent at least 6 weeks after buying to ICARO paragliders.

² - EN 926-1 und EN 926-2 for gliders, EN 1651 for rescue systems , EN 12491 for harnesses, all at the time guilty version
- LTF/ NfL II 91/09 und NfL 2-60-14

What is excluded from guarantee?

- Gliders and Harnesses that are used for training purposes, Acro or other official competitions,
- Gliders / Harnesses who were involved in an accident,
- Rescue equipment, which has been thrown for a emergency,
- Gliders / harnesses and rescue equipment, which have been changed by yourself,
- Gliders / harnesses and rescue equipment that were not purchased from an authorized dealer / flight school,
- Gliders / harnesses and rescue equipment where the required inspection intervals were not met and the verification of the glider was not conducted by a ICARO paragliders authorized operation / person
- Damage which has occurred due to improper treatment (i.e. storage in humidity, heat or direct sunlight)
- Parts that need to be replaced due to normal wear and tear,
- Discoloration of the cloth material used,
- Damage caused by solvents, salt water, insects, sun, sand, humidity or “debag-jumps”.
- Damage caused by force majeure.
- Damage caused by the paramotor (Oil, fuel, damage in cause of the prop)

In case of a concluded claim the period of guarantee carries on. The period of guarantee and the connected claim are not prolonged and are only valid until the original date of expiry.

The freight costs (transport to and from) are not paid by ICARO paragliders.

Annex

Guarantee Card

Please fill in the guarantee card which you find on our homepage www.icaro-paragliders.com and send it.

Users needs for Inspections

You will need the following items in order to perform a paraglider inspection:

- Standardized inspection report
- Porosity meter
- Spring scale
- Equipment for measuring line lengths
- Equipment for line strength testing
- Sewing machine
- Big, clean and bright room

Technical specifications about your glider (type, serial number, size and year of production). Please call ICARO paragliders for information.

Three week courses at ICARO paragliders, specified to a glider type together with a legal flight license are the necessary prerequisites for permission to inspect ICARO paragliders.

Inspection Instructions

Record Information

Spread out your paraglider in a big bright room and make a note of information such as model, type and serial number.

Porosity Test

Use your porosity meter to perform porosity checks at 4 different places of the canopy. The results are recorded in the inspection protocol and are to be evaluated according to the internal guidelines of the workshop.

Visual Control of the Canopy

Hang up the canopy so that you can do a visual check of your canopy. Check for perforations in the upper and lower sailcloth, damaged stitching between the cells, and damage to the leading/trailing edge reinforcements.

Each cell must be checked.

Visual Control of the Risers and Lines


Check the risers, the trimmers, the stitching at each line loop, the brake lines, all seams and line contact points. Each line must be measured and inspected for kinks.

Strength test of the lines

One complete A-and B- line must be removed, measured and submitted to a strength test. The measured value of each individual line must be noted in the inspection protocol. The minimum of the lines strength are 125% of the normative guidelines.

Measurement of the lines

Measure every single line while stressing it with defined tractive force (5daN). Compare with the line plan. The lines must be measured between fixing point on the line lock and fixing point on the line loop.

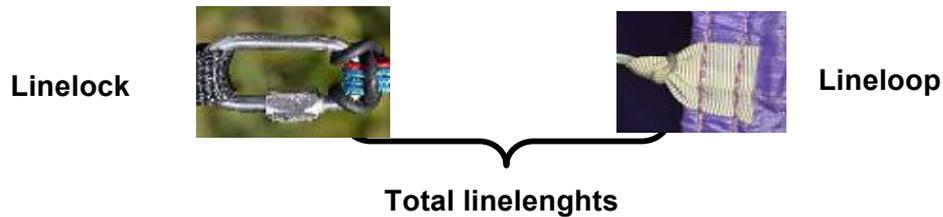

The results are recorded in the inspection protocol and are to be evaluated according to the internal guidelines of the workshop.

Assessment

The measurements of all procedures are noted in the inspection protocol. When all facts have been recorded, the technician must make a general assessment. Check the backpack for damage to the zips, seams and straps and repair if necessary with a sewing machine.

General Remarks

Any other repairs, corrections etc. to the general condition of the paraglider must be evaluated. A copy of the results of each inspection must be sent on to ICARO paragliders. The technician must report any unusual faults to ICARO paragliders within 3 days.

Inspection Reference

Only an authorized technician who has been trained by ICARO paragliders is authorized to sign and date the glider type label and sign the manual.

Line length all over**WILDCAT TE XS**

	A	B	C	D	BR
1	6351	6275	6362	6473	7218
2	6317	6242	6306	6427	7011
3	6272	6208	6274	6390	6932
4	6295	6225	6297	6406	6802
5	6270	6198	6265	6388	6689
6	6237	6166	6240	6356	6695
7	6225	6151	6233	6340	6675
8	6237	6164	6242	6344	6600
9	6208	6153	6155	6223	6637
10	6108	6061	6080	6139	6578
11	6032	5975	6008	6040	6470
12	5979	5923	5939	5966	6379
13	5786	5746	5740	5785	6329
14	5711	5705	5715		

Länge in mm	A	A1	B	C	D
normal	500	500	500	500	500
beschleunigt	370	390	390	445	500

WILDCAT TE S

	A	B	C	D	BR
1	6780	6704	6758	6868	7590
2	6741	6664	6700	6825	7359
3	6696	6629	6666	6782	7260
4	6719	6643	6684	6801	7133
5	6689	6623	6663	6780	7009
6	6660	6583	6632	6745	7017
7	6644	6564	6629	6724	6992
8	6662	6579	6638	6729	6909
9	6597	6548	6570	6637	6948
10	6492	6452	6488	6542	6902
11	6416	6374	6410	6448	6790
12	6364	6317	6339	6362	6683
13	6184	6134	6124	6173	6638
14	6105	6084	6117		

Länge in mm	A	A1	B	C	D
normal	510	510	510	510	510
beschleunigt	370	390	390	450	510

WILDCAT TE M

	A	B	C	D	BR
1	7068	6987	7025	7147	7921
2	7029	6948	6972	7104	7738
3	6991	6898	6935	7051	7660
4	6998	6920	6958	7071	7422
5	6961	6898	6930	7051	7306
6	6931	6860	6899	7016	7315
7	6919	6850	6887	6993	7265
8	6929	6863	6902	6996	7179
9	6861	6815	6838	6902	7222
10	6758	6711	6752	6813	7174
11	6680	6628	6674	6707	7035
12	6623	6565	6593	6624	6942
13	6444	6400	6390	6439	6886
14	6365	6350	6395		

Länge in mm	A	A1	B	C	D
normal	510	510	510	510	510
beschleunigt	370	390	390	450	510

WILDCAT TE L


	A	B	C	D	BR
1	7421	7329	7383	7504	8177
2	7373	7277	7335	7467	8050
3	7328	7235	7284	7411	7931
4	7345	7248	7314	7434	7791
5	7317	7224	7276	7408	7662
6	7280	7192	7249	7372	7678
7	7260	7173	7233	7343	7658
8	7271	7190	7250	7352	7566
9	7216	7163	7184	7256	7609
10	7108	7055	7088	7160	7556
11	7018	6962	7001	7052	7420
12	6954	6908	6924	6959	7306
13	6759	6709	6694	6750	7250
14	6677	6649	6693		

Länge in mm	A	A1	B	C	D
normal	510	510	510	510	510
beschleunigt	370	390	390	450	510




WILDCAT TE

ALL SIZES

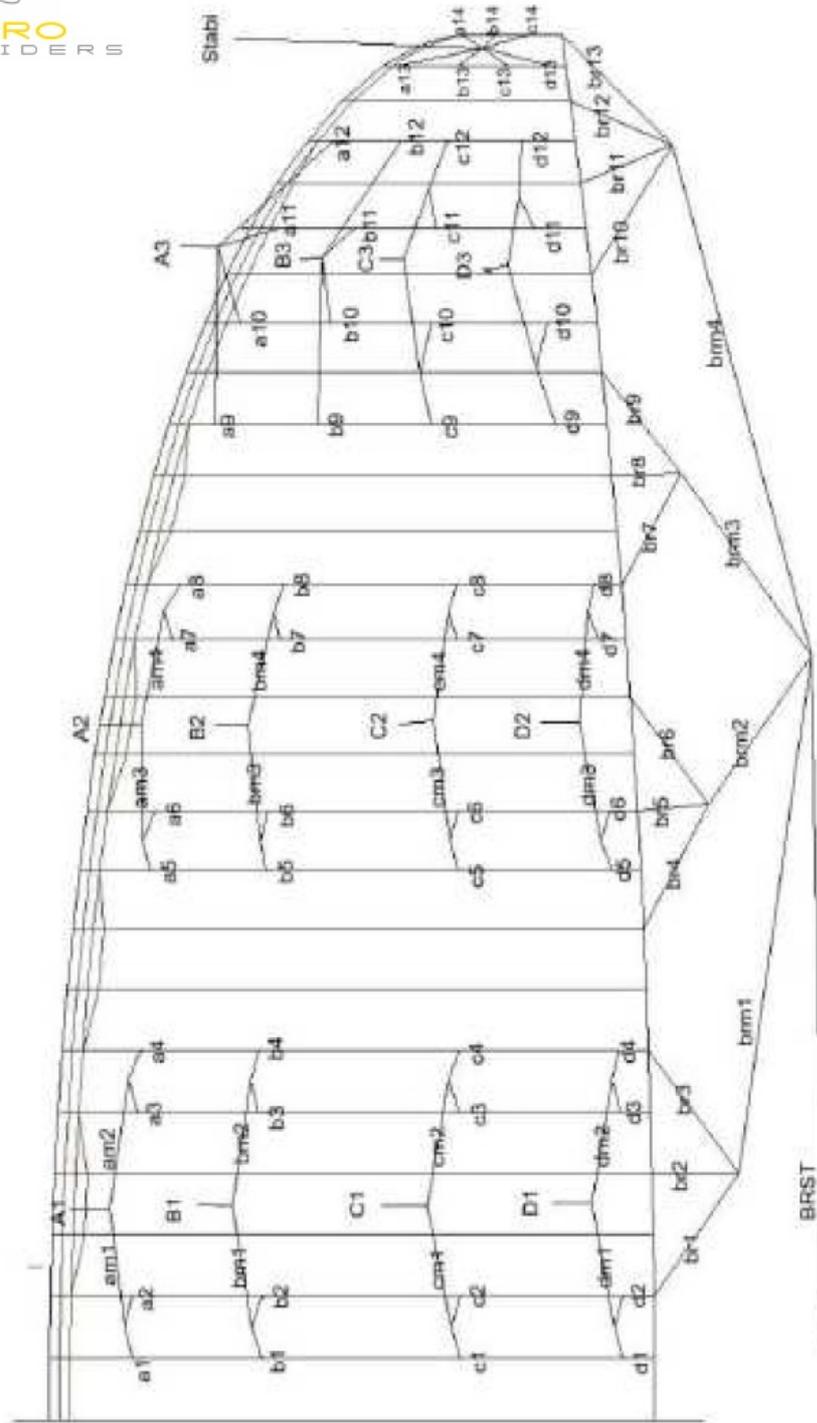

Description of the canopy (schematic)

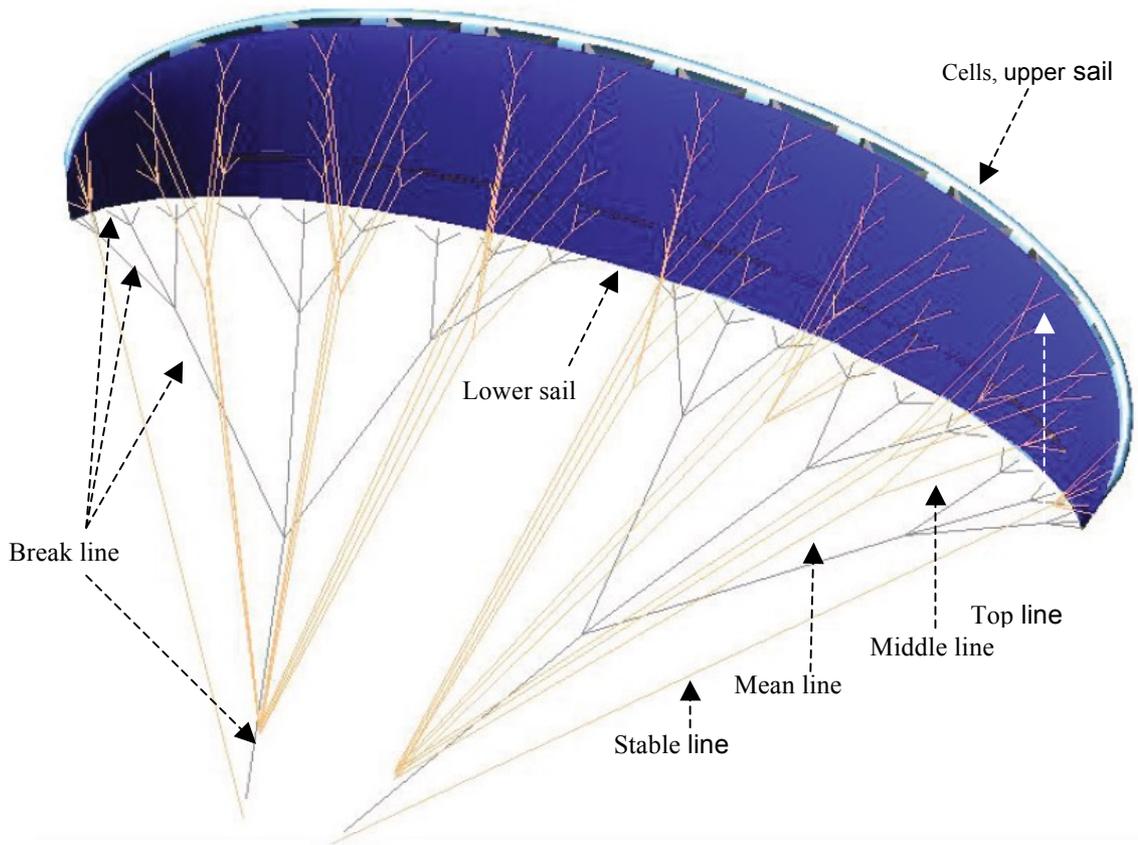

Dispatch protocol/ Delivery content

- Inner bag
- Compression band
- Risers bag
- Manual
- Repair set
- Outer rucksack
- Gift
- Sticker

.....

Date

.....

Signature